



# Acer Chromebook C740 LCD Screen Replacement

Replace the LCD Screen on a Acer Chromebook C740.

Written By: Grace Bassett



## INTRODUCTION

The LCD screen replacement for the Acer Chromebook C740 requires removing the screen frame, removing several screws, and unplugging the the LCD screen.



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Heavy-Duty Spudger](#) (1)



### PARTS:


- [Acer C740 Chromebook LCD](#) (1)
-

## Step 1 — LCD Screen



- Power down the Chromebook and disconnect the power adapter.


## Step 2

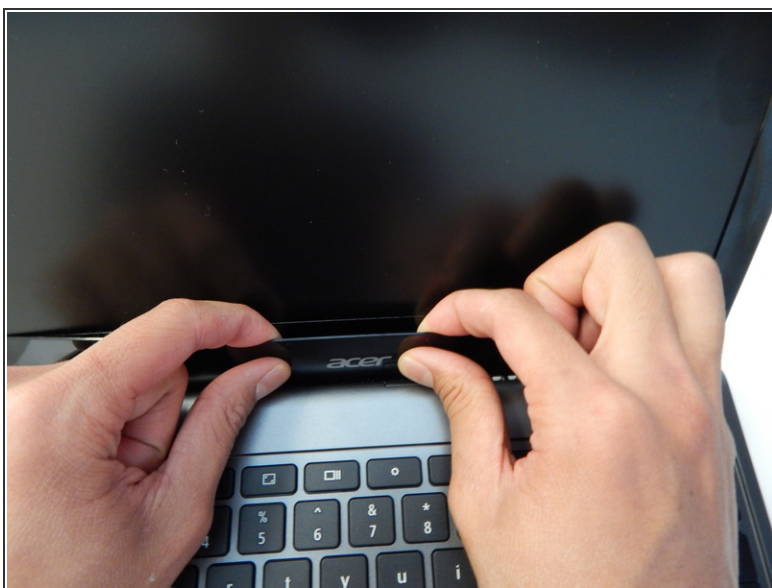

- With the Chromebook open and face up, pry the black screen frame with your fingers.
- Move slowly around the display to evenly remove it.
- ⓘ Clicking sounds indicate the panel is separating from the overall display.



### Step 3

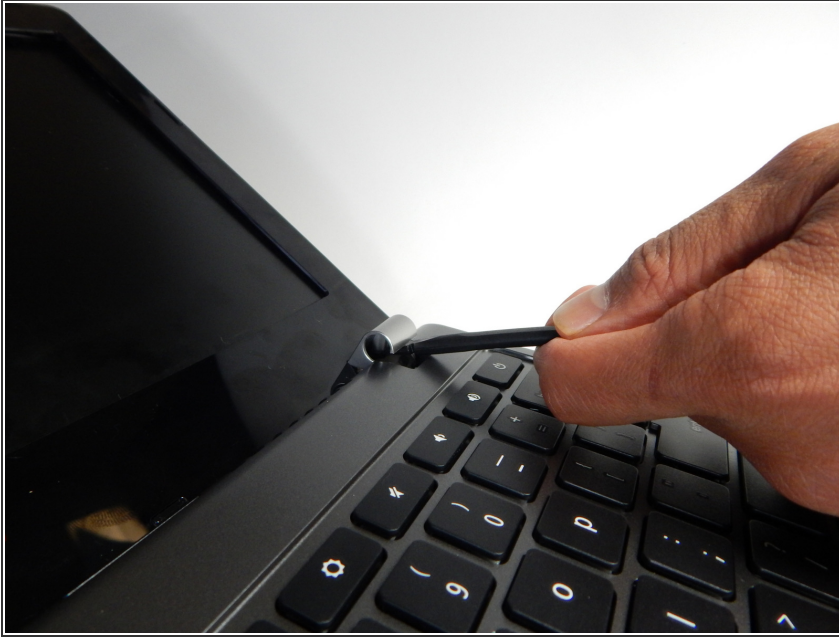


- Once the frame is separated from the display, angle the display assembly back .
- Lift up the portions of the frame covering the front two hinges with the spudger.

### Step 4



- Remove the frame from the screen assembly by pulling the frame towards you.
- ⓘ Some adjustment of the display assembly may be needed so that the frame is not stuck near the hinges.

## Step 5

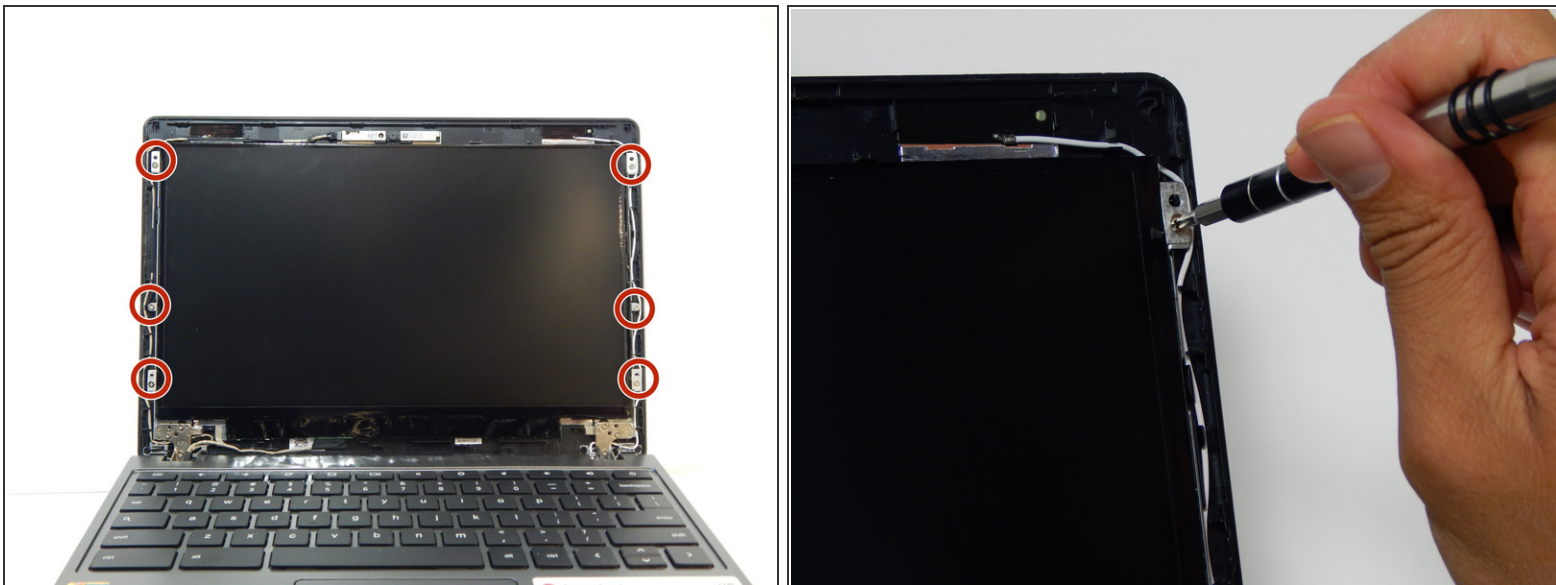

- Remove the six 3.35mm screws with a Phillips #0 Screwdriver.

## Step 6



- Place the LCD screen face down on the keyboard.
- Remove the tape holding the black connector in place.
- Unplug the connector with your hands.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-17 09:36:35 AM.